

Car Multimedia Player

USER MANUAL
(MP5)



USE IT MORE CLOSE TO YOUR LIFE

Note	01
MENU	02
RADIO	03
USB/SD	04
BT/AUX IN	06
SETTING	08
Other instructions	11
Troubleshooting guide	13
REMOTE CONTROL	15




Note: Please reading this before installing.

- This item is installed for 12V inside car .
- You must connect the cables as the diagram.
- If not connect its cables correctly , it may destroy the machine or the car electronic system.
- Speaker cables must be connected with the car speaker cables and do not connected the car body. Make sure all cables are connected correctly before switch on the machine.
- When you change the fuse , must get the same size to change
- Do not block the air wholes and heating panel, otherwise it will get fire.
- After install the machine , please press RESET to reset it as the beginning using.
- First, do not turn off when not installed.
- Do not install under 18 years of age.
- Wear gloves when installing the product to avoid scratches.

1. Main menu functions



2: RADIO

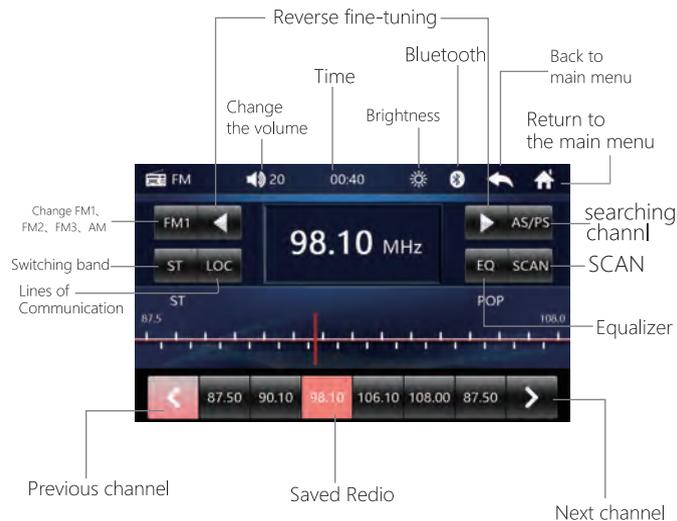

3. USB, SD : Playing music ,video, photos (Maximum support 32G)


A. Music.

(Support MP3, MP2, MP1, WMA, OGG,APE, FLAC, AC3, DTS, RA,AAC, AMR, ATRC MID, WAV,)



B : Video : Same as Music instructions.

(Support AVI, DIVX, PMP, 3GP, MP4,M4V, F4V, MPG, MPEG, VOB,DAT, RM, RAM, RMVB, FLV,WMV, ASF, MKV, PSR, TP,TRP, TS, M2TS, MOV)

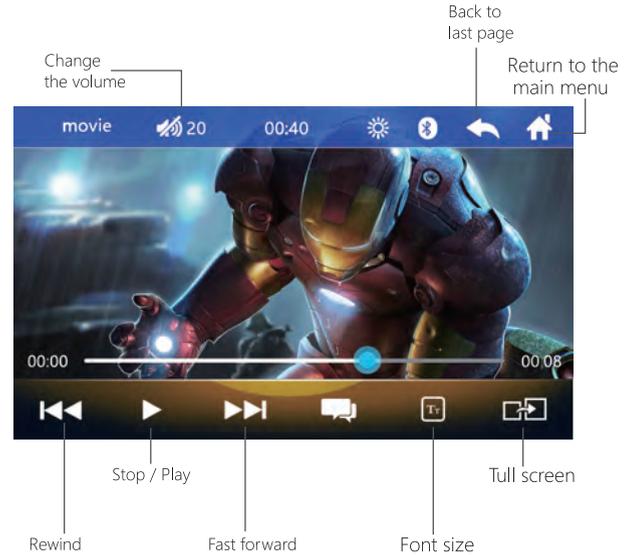


4: BT (BT Settings Password :0000)



Play BT music menu. Play/Stop/ Previous track / Next track


A. BT Music

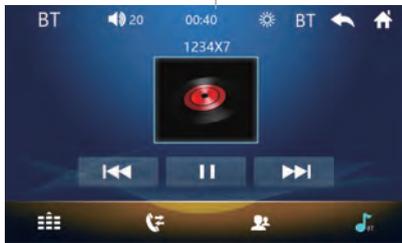

BT Contacts



5: AUX IN

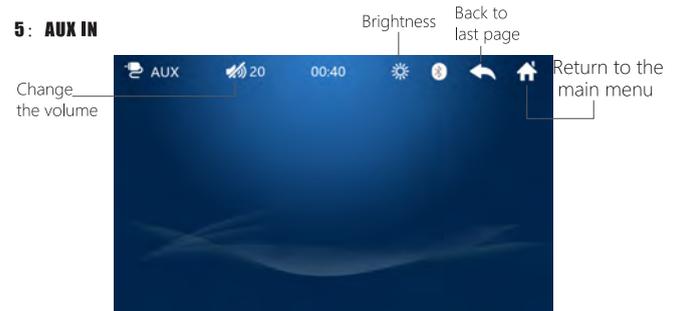

6: SETTING (Restore Factory Settings Password :8800)



Sound settings

Reset all



Other settings

Reset all

Dispaly settings



Led BackLight

B. Time setting.



setting year,month,date,time.

C. Language setting.



Click on the map of the English or simplified Chinese language can be switched.

D、wallpaper



E、Steering wheel control



Instructions

Press the control of a button, the voltage 255 will become another value, and then press the machine corresponds to a function, and then press OK, set the number will display 1, and then one by one to learn this step, learning the corresponding function, The machine will turn green, and set the number of learning will show how many functions can be the last exit.


7: Other instructions

A、Socket connecting (convenience receptacle)

CONVENIENCE RECEPTACLE

1 NC	2 NC
3 Steering wheel control 1 (Brown Black)	4 Steering wheel control 2 (Orange Black)
5 Auto antenna (Blue)	6 NC
7 Speaker front right + (Grey)	8 Speaker front right - (Grey&Black)
9 Speaker front left + (White)	10 Speaker front left - (Black&White)
11 Brake wire (Brown)	12 Rear view (Pink)
13 Headlight control (Orange)	14 ACC (Red)
15 12V(B+) (Yellow)	16 Ground wire (Black)
17 Speaker back right + (Purple)	18 Speaker back right - (Purple black)
19 Speaker back left + (Green)	20 Speaker back left - (Green Black)

B、Socket connecting (RCA Tail)

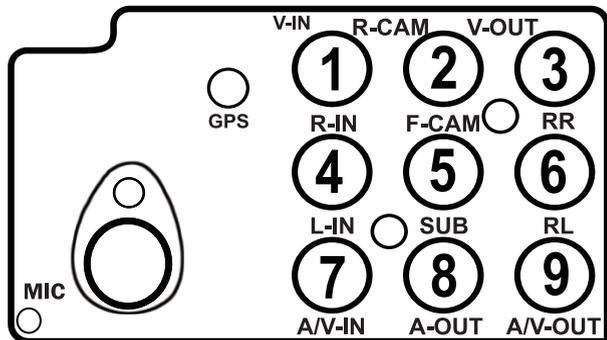

Parameter name	Parameter
Power DC	10.8-16.0V
Current MAX	12A
Memory current	<10mA
Working temperature	-20°C+60°C
Keeping temperature	-30°C+80°C
Video	PAL/NTSC
Radio	FM:87.5MHz-108MHz
Screen	TFT OSD
Radio saving	FM:18 channel
Searching	Automatic / manual
Sound data:	Sound imbalance $\leq 2\text{dB}$ Sound resolution $\geq 70\text{dB}$
Frequency response	20Hz-20KHz($\pm 3\text{dB}$)
Power amplifier parameters	4X60W
Test power	14.4V
Speaker impedance	4-8 Ω

C、Data

1. troubleshooting guide


A. Common troubleshooting guide.

TROUBLE	REASON	THE SOLUTION
Can't boot up	Power fuse burn out	Replace with the same fuse
	Other factors causing microprocessor operation is not correct	Press the RST on the drawing board in a sharp things, then restart
Ignition switch is turned off, all information is lost	Ignition line ACC and the positive power line batt is connected to the wrong	exchange the line and rewiring
The remote control doesn't work	Battery power on the remote control is not enough	Replace the battery
Poor reception	Did not put the antenna outside The ground Antenna is poor connect	Check whether the radio automatic antenna ANT had connect. To check the antenna. Whether the ground wire is connected
Unable to convert language/subtitles	Disc only have a language/subtitle	Only a language/subtitle, so it can't convert

B. About this manual.

The machine has a series of advanced features, to ensure efficient and receive operation, so these features are designed to simplify the operation, but there is a multi-functional did not say. This manual will help you understand the product performance and operation.

This manual mainly introduces the remote control and touch screen, there are some related functions can only be launched by the remote control and touch screen operation, there are certain functions can be realized by the host

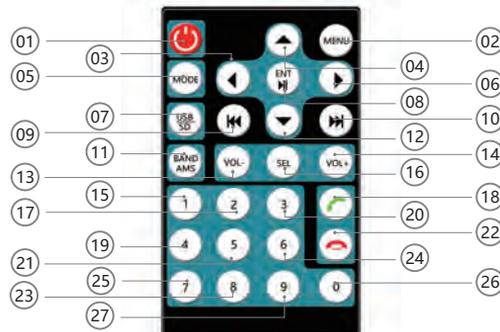

Menu key, short press to return to the main menu, again Press to return to the current state.

MENU

Number	ICON	Features
01		Switch key: short press to switch machine.
02	MENU	Menu selection
03		Direction Left key: short press to jump left. (Note: not in any interface are valid)
04		Direction key: short press to jump up. (Note: not in any interface are valid)

Number	ICON	Features
05		Mode key: Short press To perform mode conversion.
06		Right Direction: Short press to jump right. (Note: not in any interface are valid)
07		USB/SD Menu selection
08		Confirm / Play / Pause: Press this button to confirm the selection, play / pause when playing audio / video
09		Tone +: Short press this button to increase the volume, long press this button will continue to increase the volume.
10		Tone +: Short press this button to increase the volume, long press this button will continue to increase the volume.
11		Band key: Short press to switch band. A M S key, short press the automatic scanning station coexist, and then radio preview. (Radio active)
12		Down key: Short press to jump down. (Note: not in any interface are valid)
13		Tone - Short press this button to decrease the volume. Press this button to decrease the volume.
14		Sweep - / Previous key: When in the radio state for the low-end scanning station. When playing audio and video for the first play.
15		Digital 1 key: When playing audio video, optional song, BT can dial.

Number	ICON	Features
16		BAS/TRE/BAL/FAD/LOUD/EQ/Bri/Con/Sat/Hue/Beep
17		Digital 2 key: When playing audio video, optional song, BT can dial.
18		Answer key: when not in the BT short press this button will enter into the BT mode, the caller to answer the call.
19		Digital 4 key: When playing audio video, optional song, BT can dial.
20		Digital 3 key: When playing audio video, optional song, BT can dial.
21		Digital 5 key: When playing audio video, optional song, BT can dial.
22		Hang up key: When an incoming call, press to end the call.
23		Digital 8 key: When playing audio video, optional song, BT can dial.
24		Digital 6 key: When playing audio video, optional song, BT can dial.
25		Digital 7 key: When playing audio video, optional song, BT can dial.
26		Digital 0 key: When playing audio video, optional song, BT can dial.
27		Digital 9 key: When playing audio video, optional song, BT can dial.