

XOMAX

Instruction Manual

MODEL: J? Z\$6(+##%



2-Din Digital Multimeida Player
6.5" TFT Touch Screen
AM/FM Receiver, USB/SD, Bluetooth

IMPORTANT:

- Do not operate this digital video player while the vehicle is moving.
- This is a safety feature to prevent driver distraction.
- It's illegal in most country for the driver to view video while the vehicle is moving.
- The digital video functions will be only operated when vehicle is in park and the parking brake is engaged.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion, we want you listening for a lifetime.
- Once you have established a comfortable sound level, set the dial and leave it there.

How to Handle Discs:

- Handle a disc by its edges. Do not touch the playing side.
- Before inserting a disc, wipe the disc outward from the disc center with a clean, soft, dry and lint-free cloth. Do not use solvents or thinners such a petrol/benzene or clearners.
- After removing a disc from the disc slot, place the disc in a sleeve or case to keep it clean and prevent scratches.
- Do not stick paper or tape on the disc surface. If there is glue(or adhesive) on the disc surface, remove it before using the disc.



Precautions:

1. To reduce the risk of fire, electric shock, and interference, do not attempt to repair this product yourself. Refer all servicing to a qualified technician.
2. This digital video player is compatible with VIDEO/AUDIO discs with 12 cm size:

- DVD disc
- VCD disc
- CD, CD-R, CD-RW disc
- MP3 disc

3. Do not switch on this digital video player for long time when the vehicle's motor is switched off. This could cause the vehicle battery to discharge and the vehicle can no longer be started.
4. Do not apply strong mechanical stress like drop, shock or any force to the TFT LCD. Do not too hard hit, press or rub the TFT LCD display surface. If the display surface is dirty, please wipe the surface softly with cotton swab or clean cloth.
5. Never place any foreign objects into the openings of this product such as disc slot, USB port, AUX IN jack. Otherwise you might damage the slots and connectors.
6. Do not throw the battery cell of remote control into fire as this may cause an explosion. Keep battery cells out of reach of children.

Copyright Notes:

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners.

Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Region Management information:

This product is designed and manufactured to respond to the Region Management Information that is recorded on a digital video disc. If the Region number described on the digital video disc does not correspond to the Region number of this DVD player, the disc cannot be played on by this DVD player.

INSTALLATION:

 
• Before Installation:

- We recommend you to let a professional technician install the unit in vehicle.
- Disconnect negative battery terminal of vehicle.
- Remove the trim ring from unit (if installed).
- Remove 2 transit screws located on top of the unit.


• Mounting the Head Unit:

- Carefully remove the existing head unit.
- Before finally installing this product, connect wiring harness temporarily and make sure it's all connected up properly and test the head unit if it can work properly. (Consult a qualified technician if you are unsure)
- Insert the mounting sleeve into the installation dashboard.
- Bend multiple mounting tabs around the mounting sleeve until the mounting sleeve is secure.
- Connect all wiring harnesses and slide the head unit into the mounting sleeve until it clicks into place.
- To fix this DVD player onto the rear part of the chassis using the mounting sleeve, metal strap, hex bolt and screws to the vehicle.

Note: if you need other screws to fix other terminal, please buy from your dealer according to the drilling of holes size.

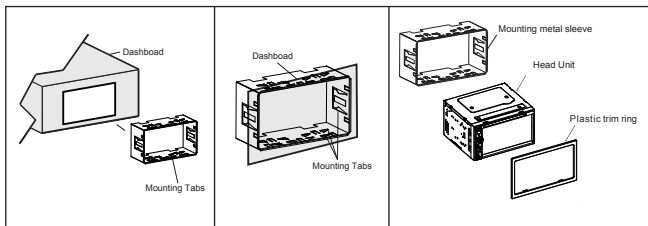


Wiring Connections:

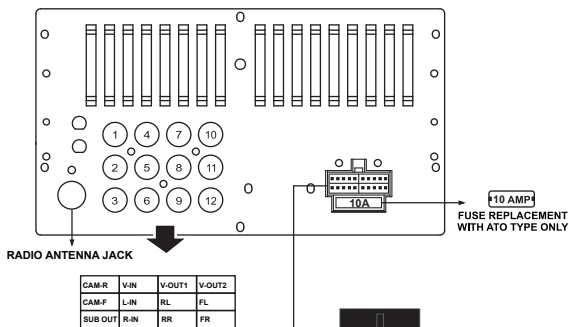 

Audio/Video I/O Connections

 1. Rear View Camera Video input (Yellow)
2. Front View Camera Video input (Yellow)
3. Subwoofer Output (Green)
4. Video input (Yellow)
5. Left Audio input (White)
6. Right Audio input (Red)
7. Video Output 1 (Yellow)
8. Rear Left RCA Output (White)
9. Rear Right RCA Output (Red)
10. Video Output 2 (Yellow)

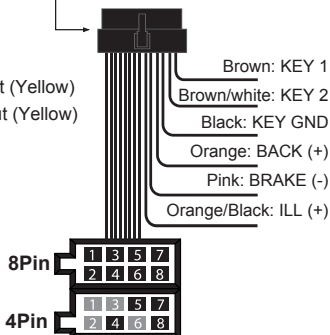

Note: the ground connection cable (parking brake B-) must be connected in order for pictures to be played back to the monitor. If the cable has not been correctly connected, warning message appears on the monitor.

Control Panel Buttons:



1. /VOL Knob / Setting Menu Button

- Press it to turn the unit on. press it again to turn the unit off.
- Rotate the VOL knob to increase or decrease the volume level.
- Press the SEL button to access to audio settings: Volume, Dimmer, Balance, Fader, Loud On/off, EQ Standard/Pop/Classic/Rock/Jazz.

2. IR Remote Sensor

3. Handsfree Microphone

Uses the bluetooth handsfree system to receive your voice when calling.

4. (Eject) Button

Insert the disc, label side facing up, until the mechanism senses its presence and draws the disc in. Press it to eject the disc.

5. Reset System

The RESET button is used to reset all parameters to factory default settings. This function may be used when the LCD does not display normally or sound is distorted, or when any of controls are disabled.

Gently press the RESET button to reset the system with a thin object with a pointed end.

6. USB port for charger (Orange Connector)

This USB port supports charging smartphones and tablets.

The charging current consumption is 5V 2A.

7. TF Card (Mini SD Card)

This mini SD card slot is designed for media playback from TF card (mini SD card).

Control Panel Buttons:

8. USB port for media playback (Black USB Connector)

- This USB port is designed for media playback from flash memory devices. If you would like to play MP4/MP3/WMA/JPEG files inside a USB stick, insert the USB stick into the USB port, it will play automatically.
- This USB port also designed for android smartphone phonelink.

9. Auxiliary Input Jack

Insert an external device to this 3.5mm auxiliary jack in order to have audio output of the device through the unit.

Remote controls:

1. MODE

Press it briefly to select different modes: DISC, RADIO, USB, SD, Phonelink, Bluetooth and AUX IN(AV IN).

2. Power on/off

Press it to turn the unit ON or OFF.

3 & 7. ►► / ◀◀

In Disc/USB/SD card Playback mode, press each one to reverse and fast forward with X2, X4, X8, X16 speed.

In Radio mode, press to select the next or previous preset station.

4. AS / 📞

In Radio mode, press and hold AS button to store 18 FM stations and 12 AM stations automatically.


Press it briefly to recall the preset station that stored in memories in each band.

Press the 📞 button to make a call / receive a call / redial the last dialed phone number.

5. ►|| (Play/Pause)

In Disc/USB/BT music playback mode, press it to pause playback.

 Press it again to start where playback stopped.

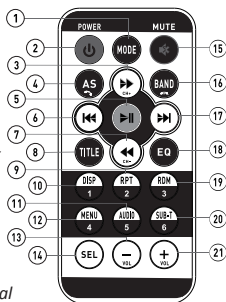

Remote controls:

6 & 17. ⏮ / ⏭

In Disc/USB/SD card/BT music playback, press each one to skip next or previous track.

In Radio mode, press each one to seek tuning down or up. Press and hold each to manual tuning down or up.

8. TITLE

In DVD playback, press this button to enter title menu which is recorded on the media. (If the DVD disc with title menu).

9. RPT(Repeat playback) / 2

In Disc/USB/SD card playback mode, press and hold the RPT button to enter different repeatedly playing modes: Repeat title, Repeat One, Repeat F(folder), Repeat All.

In radio mode, press to store or recall the preset station 2.

10. DISP / 1

In video playing mode, press and hold DISP button show information such as Title number, Chapter number, Track number, elapsed time, remain time etc.

In radio mode, press to store or recall the preset station 1.

11. AUDIO / 5

In DVD playback, press and hold AUDIO button repeatedly to switch the language of audio if the DVD disc is recorded with multi-languages.

In VCD playback, press and hold AUDIO button repeatedly to switch L/R or stereo audio track.

In radio mode, press to store or recall the preset station 5.

12. MENU / 4

In DVD playback mode, press and hold the MENU button to display the root level directory of DVD disc.

In radio mode, press to store or recall the preset station 4.

13 & 21. VOL+/VOL-

Use these controls to adjust the volume level.

14. SEL

Press to turn to audio settings.

15. MUTE

In power on mode, press the MUTE button to toggle mute on or off.

16. BAND /

Press BAND to select between FM1, FM2, FM3, AM1 and AM2 bands.

In BT mode, press to reject an income call or end a call.

18. EQ

Press repeatedly to cycle through the different equalizer curve presets.

19. RDM / 3

 
In Disc/USB/SD card Playback mode, press and hold RDM button to play tracks in random order, press again to cancel the RDM function.

In radio mode, press to store or recall the preset station 3.

20. SUB-T/6


In DVD playback, press and hold the SUB-T button repeatedly to switch the language of subtitle if the DVD disc is recorded with multi-subtitles.


In radio mode, press to store or recall the preset station 6.

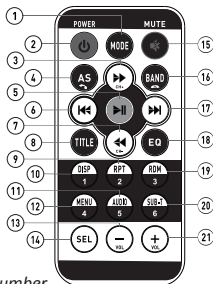


Setup Operations:

Main Menu:

  In each mode, touch the  icon to enter the main menu as below image. In the main menu, tap the desired icon to enter each of the following settings: Disc(CD/VCD/DVD), Radio, Phonelink, USB, Bluetooth, EQ Preset, AUX/AV IN, F.CAM(Front View Camera), Setup.

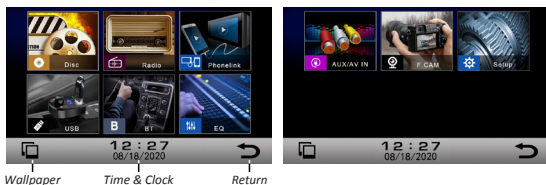



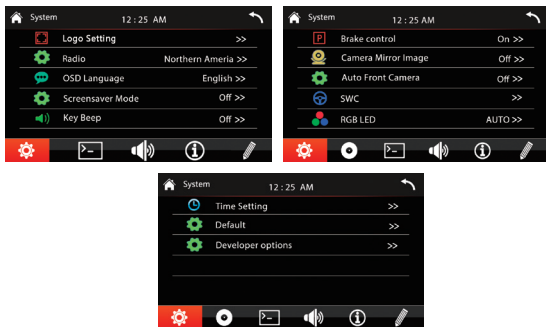


In main menu, touch the “Setup” icon to enter the setup menu, as below image. Then user can set up or adjust the general settings for this DVD player.

 
 


A. System: Logo Setting, Radio Area, OSD Language, Screensaver Mode, Key Beep, Parke contro, Headlight Detection, Camera Mirror Image, Auto Front Camera On/Off, SWC, RGB LED Setting, Time Setting, Default.


- Radio Area: To choose the radio area: EUROPE, Northern America, South America, Russia, Japan, Asia.
- OSD Language: English, Chinese, Arabic, Greek, Thai, Hebrew, Turkish, Russian, French, German, Spanish, Persian, Indonesian, Portuguese, Italian.
- Screensaver Mode: Enables or Disables the screensaver of this DVD player.
- Key Beep: Enables or Disables the beep buzzer signal to confirm use.

Setup Operations:


- **Parke control:** Enables or Disables the brake detection.
This safety feature to prevent driver distraction. We recommend user to enable this brake detection function. When enable this function, user were forbidden to watch video from this unit while this system is not detect the brake signal of the parking brake.
- **Camera Mirror Image:** Enables or Disables the camera mirror image.
- **Auto Front Camera:** Allows you to preset the duration of the front view camera video: Off, 5 seconds, 10 seconds, 15 seconds.
- **SWC(Steering Wheel Control)**
Tap "SWC" to enter the study operation menu.
First, make sure the SWC connecting wires have been connected to this unit.
Before study, tap the  icon to clear all previous settings.
Press and hold a steering wheel button, at the same time, tap the function button on touch screen that you want to set on to the steering wheel.
- **RGB LED (Key Lights):**
 - To preset the color of button illumination: Red, Blue, Purple, Green, Yellow, Cyan, White, Auto(color automatically change one by one), LED Off.
- **Time Setting:**
Tap the "Time Setting" to enter the time setting interface, tap the  and  button to adjust Year, Month, Day, Hour, Minute.
Tap the  button to preset 12 or 24 Hours format as sytem clock time format.
Tap the  button to preset date format.
- **Default**
Tap this item to restore to all parameters to factory default settings.

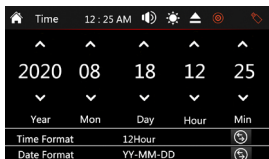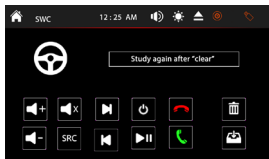

B. DISC(DVD Setup):


Tap the  icon to set up the DVD system language:

 - **Audio Language:** Chinese, English, Japan, French, Spanish, Portuguese, Latin, German
- **Subtitle Language:** Chinese, English, Japan, French, Spanish, Portuguese, Latin, German
- **Menu Language:** Chinese, English, Japan, French, Spanish, Portuguese, Latin, German
- **Password:** Allows you to change the password, first input old password, then you can change the password for parental control rating as your favour. The factory default password is "0000".
- **Rating:** Every time changing parental control rating, user have to input the password. User can select one of below suitable parental control rating: 1 Kid Safe, 2 G, 3 PG, 4 PG 13, 5 PG-R, 6 R, 7 NC-17, 8 Adult.

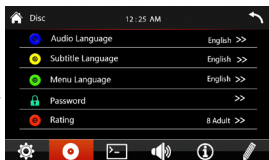

Setup Operations:

 
C. Screen(Video Settings)

Tap the  icon to set up the video parameter of screen:

- Adjust(Video Parameter Settings)

Tap this item to set the Brightness, Contrast, Hue, Saturation, Sharpness of this TFT screen.

- Brightness: 00, ~, 36
- Contrast: 00, ~, 36
- Hue: 00, ~, 36
- Saturation: 00, ~, 36
- Sharpness: 00, ~, 36

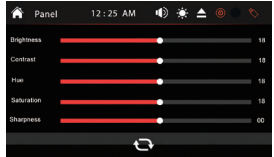

Tap the  icon to clear all previous settings.


- Touch Calibration

Touch this item to enter touch screen calibration mode,

Tap the cursor “+” continuously until it move to next position. Follow the cursor to finish the calibration of touch screen.

- Wallpaper: To change the wallpaper.

D. Audio Settings


Tap the  icon to enter the audio setting:


Tap the “car” icon to enter the sound effect mode, tap the EQ button to enter EQ setting.

- Sound effect:

Tap the FL, FR, RL, RR, ALL button to preset the sound effect in car.

Move the blue circle at the middle of “car inside” interface to quick preset sound effect for driver, front seat passenger, left back passenger, right back passenger and all passengers in the car.

- Tap the “” button to clear all the audio settings.

- Tap the “” button to exit from the audio setting.

- EQ Presets:

- User can preset EQ: User -> POP -> Classic -> Rock -> Jazz.

- Tap LOUD button to enables or disables loudness.

- Tap SUB button to enables or disables subwoofer output.



E. Version (System information)

 
Tap this item to view the software version.

F. Version (Factory Setup)

Tap this item to enter factory setup.

Radio Operations:

Press the **MODE** button on the remote control, or tap the “Radio” icon on touch screen to enter radio mode.

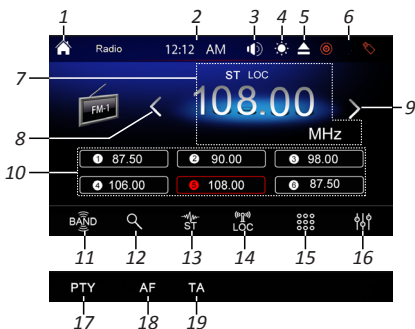


1. Home Page
2. Clock Time
3. Volume Level Adjust
4. TFT Screen Backlight brightness Adjust
5. Disc Eject
6. Active Media
7. Current Radio Reception State
- 8/9. Tune/Seek Down & Tune/Seek Up
Tap this button to seek tuning down or up.
Tap and hold this button to move radio frequency down or up one step at a time.
10. Preset Stations
Tap and hold one of preset station touch buttons to store the preset station.
Tap one of preset station touch buttons to recall the preset station.
11. Band Selector
12. (Automatic Store Preset Stations, Automatic Scan Preset station)
Tap and hold this button for more than 2 second to store station automatically.
Tap this button to recall each preset station that stored in the memories.
13. Stereo/Mono Reception
14. DX/LOC Reception
15. Input a specific radio frequency
16. Audio Setting
17. PTY(Program Types)
Touch to display program types. Search for stations according to program type.
18. TA(Traffic Announcement)
Tap the TA button to enables or disables the TA function (traffic information).
This function is used for maintaining a program being listened to during a trip if its frequency changes.
19. AF(Alternative Frequencies)
Tap this button to enables or disables the alternative frequency seek mode (AF).
When this function is enabled, the tuner will periodically scan received frequencies and play any traffic information message that may be broadcast.

DVD/CD/MP3/USB Card Operations:

Insert DVD/CD Disc

With the label facing up, insert a standard size DVD/CD disc into the disc slot. Playback will begin automatically.

Eject DVD/CD Disc

To eject a disc, first press the ►|| button to stop playback, then press the ▲ button on faceplate) or tap the  icon on the touch screen to eject the disc.

USB Connection

- This USB port is designed for media playback from flash memory devices. If you would like to play MP4/MP3/WMA/JPEG files contained in a USB flash memory device, please insert the USB flash memory into the USB port. The unit will play automatically MP3/MP4/JPEG files.
- This USB port is also designed for phonenlink and charging for iPhone / andriod mobile phone. The charging current consumption is 1 ampere.

- DVD Playback

Insert a video disc in the disc slot for video disc playback. Press MODE button on the remote control, or tap the "DISC" icon on touch screen to switch DVD playback.

 
 


1. Home Page
2. Clock Time
3. Volume Level Adjust
4. TFT Screen Backlight brightness Adjust
5. Disc Eject
6. Active Media
7. Previous Track / Fast backward
8. Play/Pause
9. Next Track / Fast forward
10. Stop Playback

11. Root Menu
12. Next Page of the Menu Bar
13. Previous Page of the Menu Bar
14. Repeat Playback
15. Random Playback
16. Title Menu
17. Zoom In/ Zoom Out
18. Multi-Subtitle Language
19. Multi-Angle View
20. Audio Settings
21. Multi-Audio Language




DVD/CD/MP3/USB Card Operations:

- VCD Playback:

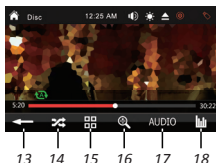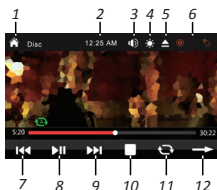

- | | |
|---|-----------------------------------|
| 1. Home Page | 10. Stop Playback |
| 2. Clock Time | 11. Repeat Playback |
| 3. Volume Level Adjust | 12. Next Page of the Menu Bar |
| 4. TFT Screen Backlight brightness Adjust | 13. Previous Page of the Menu Bar |
| 5. Disc Eject | 14. Random Playback |
| 6. Active Media | 15. PBC(Playback Control) On/Off |
| 7. Previous Track / Fast backward | 16. Zoom In/ Zoom Out |
| 8. Play/Pause | 17. Audio Track Selector |
| 9. Next Track / Fast forward | 18. Audio Settings |

   
- CD, CD-R/CD-RW/ MP3 Disc Playback:

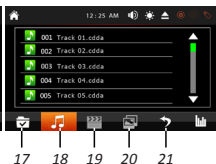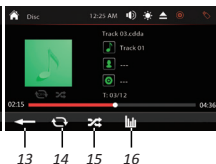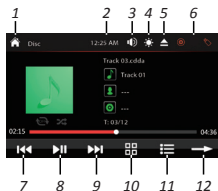

- | | |
|--|-------------------------------------|
| 1. Home Page | 12. Next Page of the Menu Bar |
| 2. Clock Time | 13. Previous Page of the Menu Bar |
| 3. Volume Level Adjust | 14. Repeat Playback |
| 4. TFT Screen Backlight Brightness Adjust | 15. Random Playback |
| 5. Disc Eject | 16. Audio Settings |
| 6. Active Media | 17. View the Root Directory in Disc |
| 7. Previous Track / Fast backward | 18. View the Music Files/Folders |
| 8. Play/Pause | 19. View the Video Files/Folders |
| 9. Next Track / Fast forward | 20. View the Photo Files/Folders |
| 10. Sort the List of the Folders and Files | 21. Return |
| 11. View the Music File List | |

DVD/CD/MP3/USB Card Operations:

 - MP3 Disc/USB Card Playback:

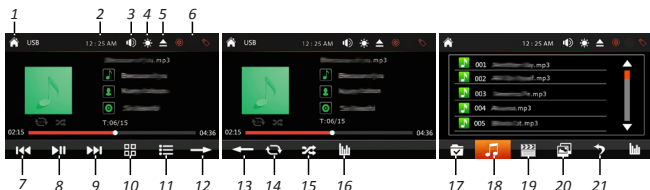

- Photo Playback:



Bluetooth Operations:

-Pairing and Connecting



Before using a Bluetooth phone with this unit, the phone must be paired and connected. The Bluetooth signal of the unit will broadcast when the power is on. This DVD player will displayed as "XOMAX" on your phone.

When prompted, enter the pass code "0000" on your phone. Once paired, the Bluetooth phone should automatically connect this unit whenever the unit is in range.


- Make a call

Input the phone number by using the keypad in Bluetooth mode.


- Making and Ending a Call

Tap  to make a call, and tap  to end a call.


- Redial last dialed number.


Tap  to redial the last dialed phone number.

- Transferring Audio


Tap  icon to transfer audio between this car bluetooth hands-free system and mobile phone.

- Disconnect or reestablish bluetooth connection

Tap  to disconnect the bluetooth connection.

Tap  to reconnect the bluetooth connection.

- Viewing Recent Call List


Tap  icon to view the income calls.

Tap  icon to view the outgoing calls.


Tap  icon to view the missed calls.

Tap  icon to refresh the recent call list.

- Contacts List (Phonebook)


Tap  icon to view the contacts(phonebook).


Tap  icon to refresh the phone book.


Tap  icon to and input a key-letter to retrieve the specified contacts.

- Streaming Audio


Tap  icon on bluetooth mode to enter the music control playback interface.

Tap  icon to skip to the previous track.

Tap  icon to play or pause the music.

 
 
 
 
Tap  icon to advance to the next track.

- Setup

Tap  icon to set auto connect, auto answer and Pin Code.

- Audio Settings

Tap  icon to set sound effect and EQ settings.

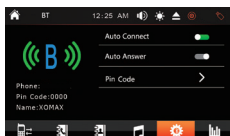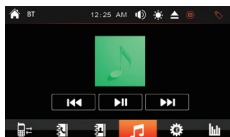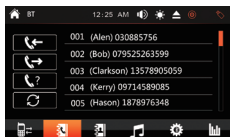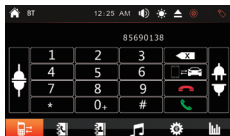

Android Phone Link Operations:

Phone link allows you to mirror the screen of certain Android smartphones on the screen of this car DVD player. Simply connect your device to the USB port and you're ready to see your favorite smartphone apps directly on the screen.

- Android phone link:

1) Please scan one of QR code on right side to download the "Phonelink" app and install it to your smartphone.



AMAZON GOOGLE

2) Connect the original cable of your Smartphone, first to the car DVD player in the USB port, and then connect it to your phone.

3) Now the car DVD player's screen will do the mirror function with your smartphone and you will be able to run any application or function of your smartphone.

Using of the Icons:

1. ↶ : Return to the previous step
2. 🏠 : Return to home page of smart devices
3. 🖥️ : Landscape mode (Rotate the screen)
4. 🚪 : Exit the phone link mode



Note:

- a. To unlink your smartphone from the car DVD player, just disconnect the USB cable again.
- b. For Android smart devices, this unit support two-way control (both by the car DVD player and connected smart devices).
- c. For Android smart devices, the Bluetooth must be connected, to have sound output.
- d. Some phones do not support Landscape mode on the home screen.

Technical Specifications:

- 2 DIN Size Universal Standard
- Power Output: 4 x 60 Watt (240 Max.)
- 6.5 inch Wide Screen TFT Video Display
- Pixel Resolution: 800 x 480 Pixels
- Brightness: 400 Nits
- Aspect Ratio 16:9 High Definition
- Video System: NTSC/PAL (Auto Recognition)
- FM Tuner Frequency Range: 87.5 ~ 108.0 KHz (50KHz/Step)
- AM(MW) Tuner Frequency Range: 522 ~ 1620 KHz (9KHz/Step)
- Bluetooth Version: 4.1
- Bluetooth A2DP, AVRCP Support
- Loudly Speaker Impedance: 4 Ohm
- Signal to Noise Ratio: 60dBA
- Frequency Response: 20Hz - 20KHz
- Connection Interface: AV (RCA) Inputs/Outputs, Subwoofer Output
- Multimedia Disc Support: DVD/VCD/CD/CD-R/CD-RW/VCD/MP3/MPEG
- File Compatibility: JPEG, MP3, MP4, AVI, WAV and More
- Working Voltage: DC 12V
- Chassis Dimensions (W x H X D): 178 x 100x 166 mm

Made for STEL Multimedia GmbH,
Paewesiner Weg 20, 13581 Berlin,
GERMANY



E-mark certification

The possible alterations of the technical data, which are related to further model modification, are valid and reserved without any preadvices.